# Operating instructions for EVAB Emergency Stretcher

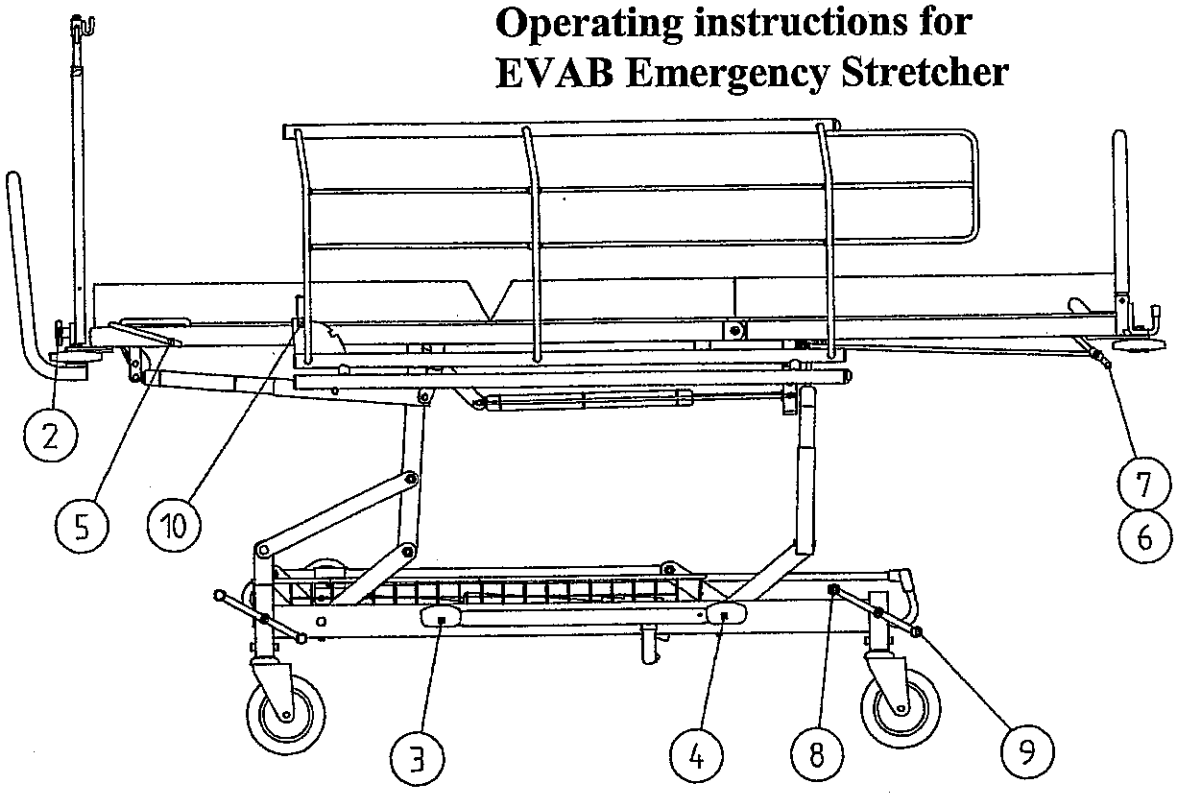


**Raising/lowering of the bed base**
Press foot pedal (3), marked up/down, repeatedly until the desired height is reached. When lowering the bed base, press pedal (4).

**Adjustment of backrest**
Lift control handle (6), then raise/lower the back to the desired angle.

**Adjustment of Trendelenburg position**
Lift control handle (6), then raise/lower the foot end until the desired angle of the bed base is attained.

**Adjusting to "sitting position"**
Raise the backrest to the desired angle in accordance with the above. Then raise the foot end by lifting control handle (6) so that a suitable angle for the seat/leg section is attained. Lift control handle (7) and lower the leg section to the desired angle.

**All functions must be serviced regularly for satisfactory operation of the stretcher. Follow the lubrication/maintenance instructions on the stretcher.**

**Lowering the foot board**
Lift the foot board vertically and fold down towards the stop lugs.

**Adjustment of the IV pole**
Release lever (2) and raise the IV pole, then tighten the lever again. The IV pole can be positioned in any corner of the stretcher

**Manoeuvring of the side guards**
Press notch (10), then fold the side guard towards the foot end of the bed.

**Adjustment of the brake/directional control of the wheels**
**Brake** - press the red pedal (8) downwards and all four wheels are then braked and locked.
**Directional control** - press the green pedal (9) downwards in order to make one wheel at the foot end of the bed directionally locked.
**Always steer from the head end of the bed.**
If the pedal is set parallel to the floor, all the wheels are unlocked and the bed can be moved freely in all directions.

**When in need of a service/spare parts or in case of queries, please contact your local supplier.**